

Zoom down hallways and your neighborhood sidewalks with sonic speed!

Mercedes-Benz CLK DTM 2000

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Mercedes-Benz CLK DTM 2000 racer is built to handle the road in style and dazzle your friends with sonic speed! Built to $1/12$ scale, it can reach speeds of up to 1,100 feet per minute.

Your racer is available in two frequencies (27 and 49 MHz) to let you race against other radio-controlled racers. Check the racer's box to see which frequency your Mercedes uses.

FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	Mercedes-Benz CLK DTM 2000
Model:	60-4287
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your Mercedes.



RadioShack®

www.radioshack.com™

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

INSTALLING BATTERIES

Warning: Dispose of batteries promptly and properly; do not burn or bury them.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities
- If you do not plan to use the racer for several days, remove all the batteries from the transmitter and the racer. Batteries can leak chemicals that can destroy electronic parts.
- Never leave dead or weak batteries in the transmitter or racer.

In the Racer

Your racer uses 6 AA alkaline batteries or a 9.6V rechargeable battery pack (neither supplied, available at your local RadioShack store) for power.


Before you can use the battery pack, you must charge it using a special battery charger (not supplied, available at your local RadioShack store). Follow the charger's instructions to charge the battery pack.

You can install and use alkaline batteries while the battery pack is charging.

Warning: If you use alkaline batteries to power the motor, they will get very hot. To avoid getting burned, be sure to wait a few minutes after you stop using the racer before you remove the batteries.

Note: Using alkaline batteries slightly decreases your racer's speed.

1. Set OFF/ON on the bottom of the racer to OFF.

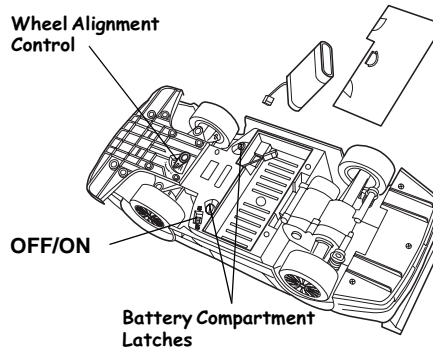

2. Use a coin to turn the battery compartment's latches in the direction of the arrows. Then lift the cover and remove it.
3. *If you are using the alkaline battery pack*, use a coin to turn the two screws on the battery adapter cover counter-clockwise, and remove the cover. Insert 6 AA batteries in the adapter according to the polarity symbols (+ and -) marked inside. Then replace the cover and secure it with the screws.

Place either battery pack in the compartment with the wires in the slot on the side of the compartment. Attach the battery pack's white plastic connector to the racer's matching connector. Do not force them together. They fit only one way.

4. Replace the cover and secure the latches.

Important: The EPA certified RBRC® Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates RadioShack is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the Unit-



ed States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cd batteries into the trash or the municipal waste stream, which may be illegal in your area. Please call 1-800-THE-SHACK (1-800-843-7422) for information on Ni-Cd battery recycling and disposal bans/restrictions in your area.

RadioShack's involvement in this program is part of the company's commitment to preserving our environment and conserving our natural resources.

If the racer runs slowly or not at all or does not respond to the transmitter, recharge the rechargeable battery pack or replace the AA batteries.

- Do not charge or recharge the battery pack while it is in the racer.
- After you charge or recharge the battery pack, disconnect it from the charger. Overcharging the battery pack could damage it.
- When you disconnect the battery pack from the charger, do not pull on the connector's wires. You might damage the battery pack.

In the Transmitter

The transmitter uses one 9V battery (not supplied). For the best performance and longest life, we recommend RadioShack alkaline batteries.

1. Slide the battery compartment cover in the direction of the arrow to remove the cover.
2. Snap the 9V battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the cover and snap it shut.

When the range of your transmitter decreases, replace its battery.

DRIVING THE RACER

1. Set **OFF/ON** on the bottom of the racer to **ON**.
2. Use the transmitter's control levers to control the racer.

Left Control Lever

- Push forward to move forward.
- Pull back to move backward.
- Release to stop.

Right Control Lever

- Push left to move left.
- Push right to move right.
- Release to go straight.

Caution: If the racer gets stuck under an object, immediately release the control levers on the transmitter and retrieve it.

3. When you finish driving the racer, set **OFF/ON** to **OFF**.

WHEEL ALIGNMENT

If the racer does not drive in a straight line when you release the right control lever, adjust the wheel alignment control on the bottom of the racer.

Turn the control toward **L** if the racer is pulling to the right or toward **R** if the racer is pulling to the left.

HELPFUL HINTS

These hints can help you get the most enjoyment from your racer.

- Running your racer continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your racer's battery pack dies, let the racer cool at least 10 minutes before installing a new or newly charged battery pack.

- If someone uses a CB nearby, it might interfere with control of the racer. If this happens, move the racer away from the CB.
- You cannot operate your racer near devices with transmitters that use the same frequency as your racer (27 MHz or 49 MHz). Check your racer's box to see which frequency your racer uses.
- If the racer moves slowly and you just installed a fully charged battery pack, check the wheel mechanisms for lint, thread, hair, or dust.


CARE

Modifying or tampering with the racer's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it. If your racer is not performing as it should, take it to your local RadioShack store for assistance.

USER-REPLACEABLE PARTS

You can order these easily replaceable parts for your racer at your local RadioShack store. Simply identify the part(s) you need from the exploded view, then find the part number in the parts list.

Part Description	RSU #
Receiver Battery Door	12334413
Transmitter Battery Door	10613156
Tire	12334421
Transmitter, 27 MHz	12334439
Transmitter, 49 MHz	12334447
Racer Body Assembly	12334454
Front Bumper	12334462
Transmitter Antenna	10540490
Service Manual	12334470
Owner's Manual	12334488

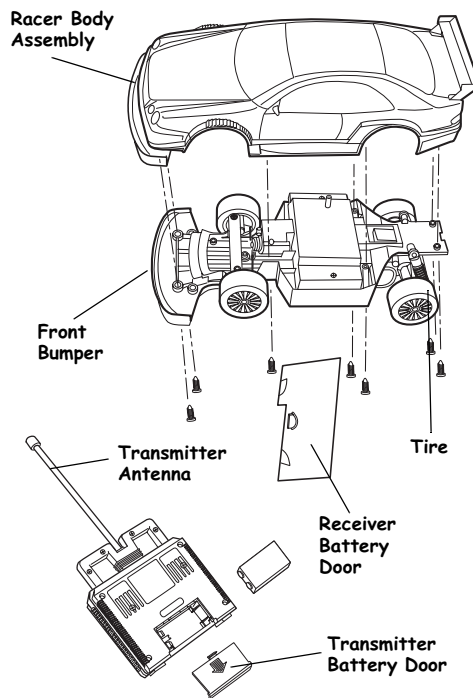

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99